


A21

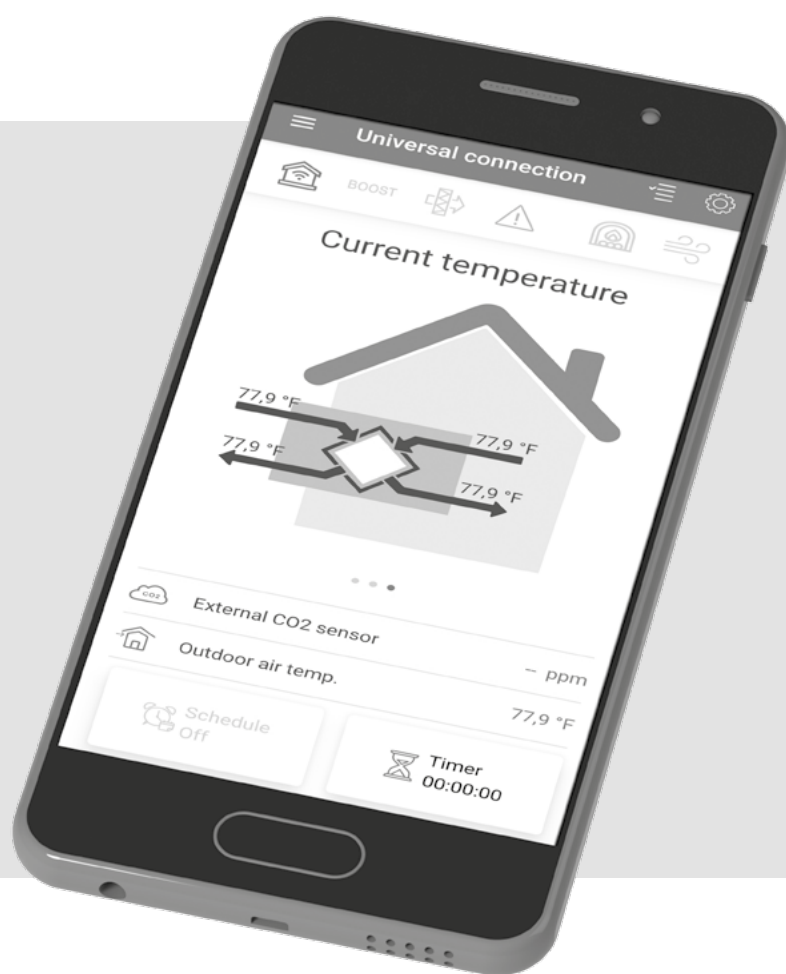

Wireless control system

CONTENTS


Controller wiring diagram.....	4
Connecting a mobile device to the unit	7
Mode priorities.....	8
Alarm and warning codes.....	9

This user's manual is a main operating document intended for technical, maintenance, and operating staff.

The manual contains information about purpose, technical details, operating principle, design, and installation of the A21 unit and all its modifications.

Technical and maintenance staff must have theoretical and practical training in the field of ventilation systems and should be able to work in accordance with workplace safety rules as well as construction norms and standards applicable in the territory of the country.

CONTROLLER WIRING DIAGRAM

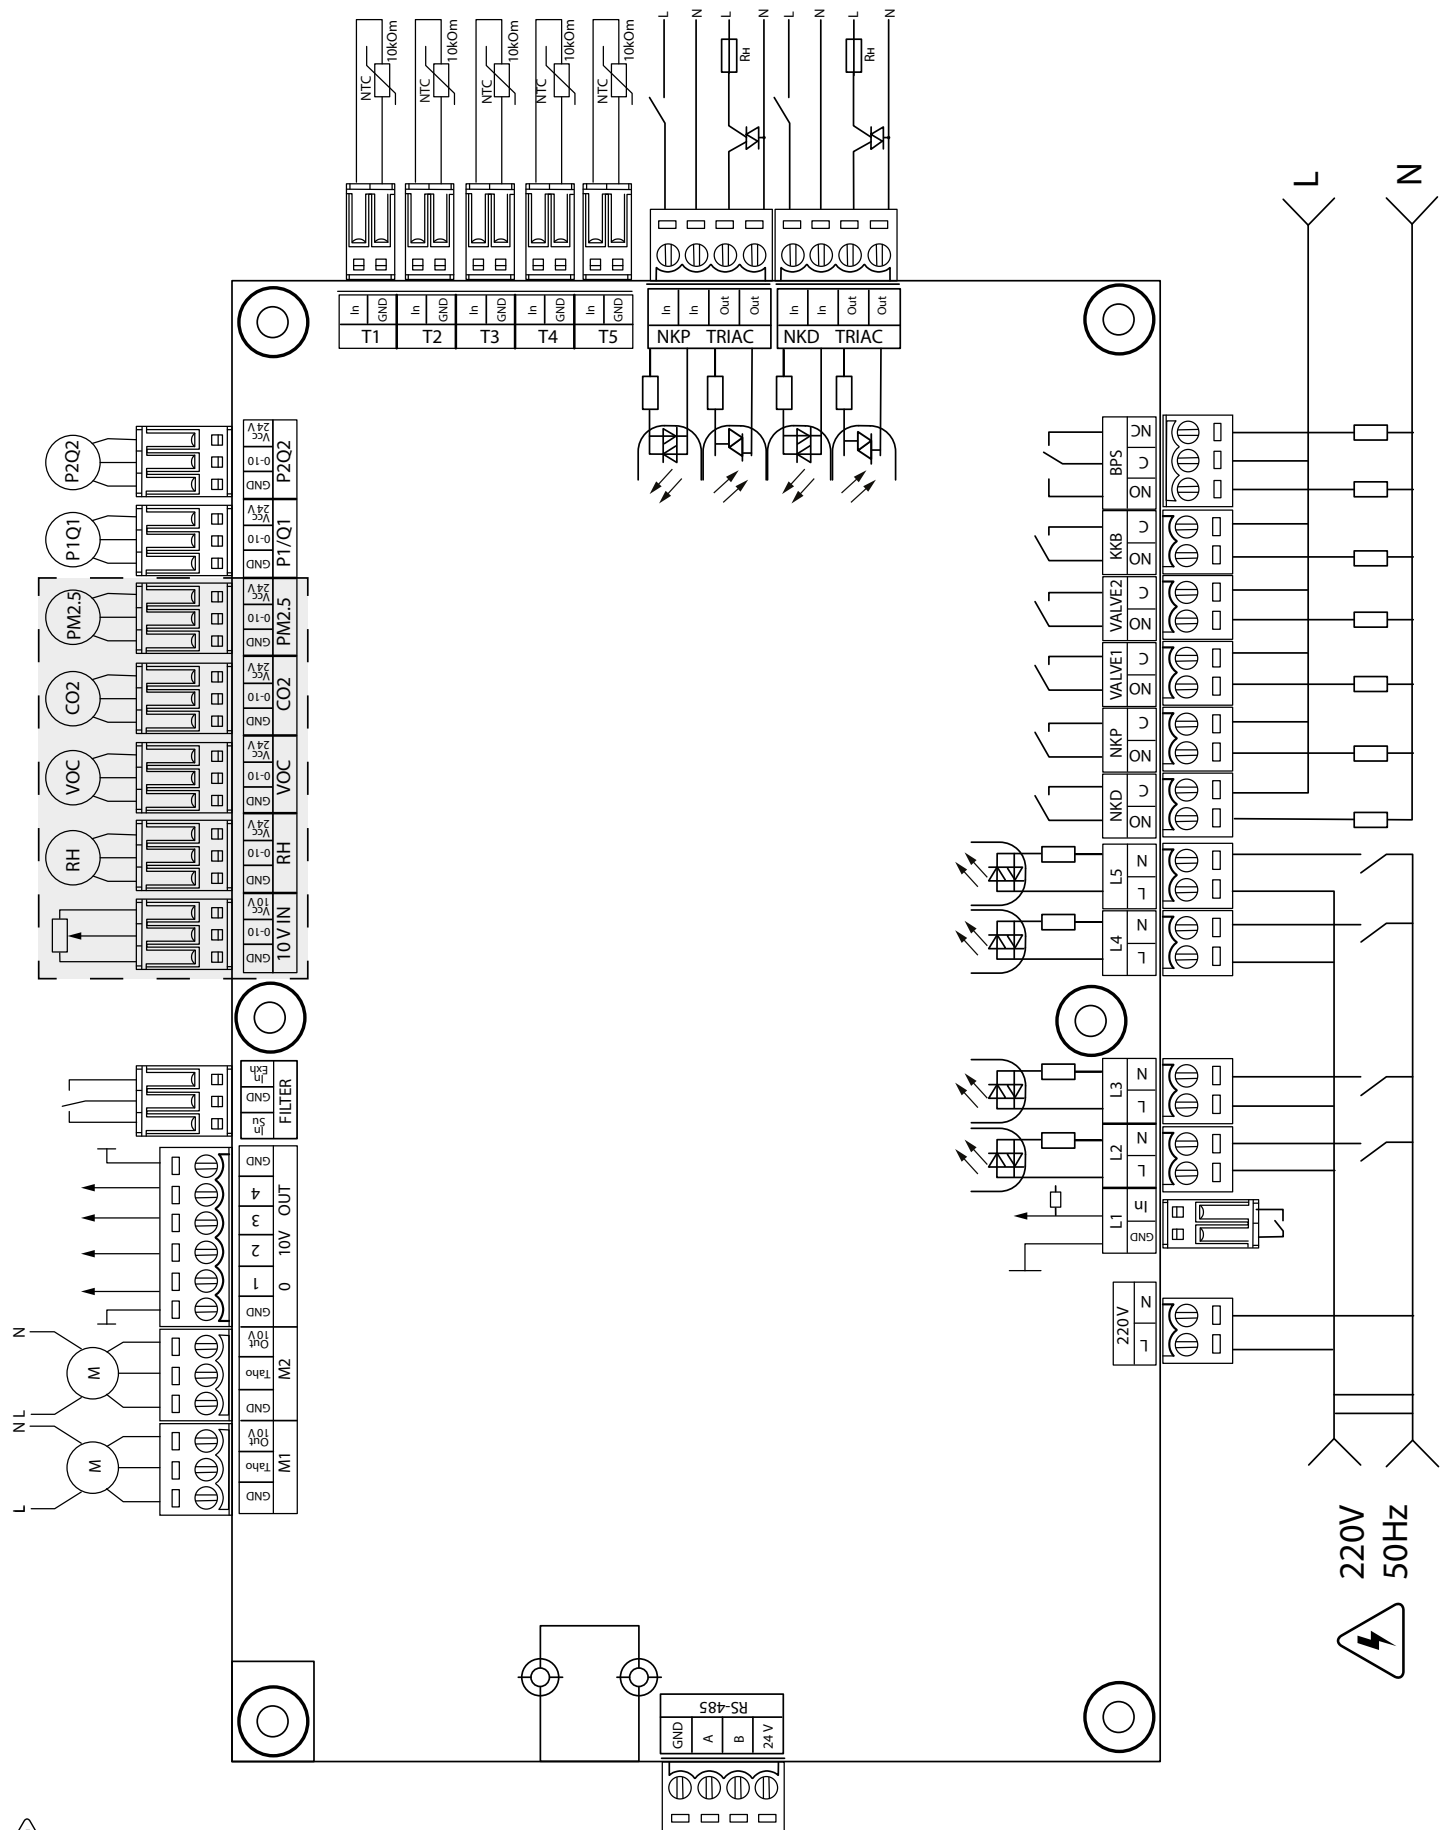

⚡ – Electric shock hazard!

Controller power supply: 100-250 V, 50 (60) Hz, maximum power consumption – 30 W.

Controller inputs

Input purpose	Input type	Signal type	Designation	Operation logic	Comments
Outdoor air temperature	Analogue	NTC 10 kOm	T1		-40...120 °C
Supply air temperature or temperature downstream of the main air heater	Analogue	NTC 10 kOm	T2		-40...120 °C
Extract air temperature	Analogue	NTC 10 kOm	T3		-40...120 °C
Extract air temperature	Analogue	NTC 10 kOm	T4		-40...120 °C
Return heat medium temperature	Analogue	NTC 10 kOm	T5		-40...120 °C
External set point adjuster	Analogue	0-10 V	10 V IN		Enables fan speed control by means of a potentiometer. This input is enabled/disabled via the Engineering Menu (sensors). The terminal is energised with 10 V.
Main humidity sensor	Analogue	0-10 V	RH		Each of the sensors is enabled/disabled via the Engineering menu. The sensors are energised with 24 V for powering external sensors. The power supply overload protection is triggered by a short circuit or a total current on the 24 V line in excess of 700 mA. Once the overload protection is activated, the power is restored only after a manual reset at the power supply unit.
Main VOC sensor	Analogue	0-10 V	VOC		
Main CO2 sensor	Analogue	0-10 V	CO2		
Main PM2.5 sensor	Analogue	0-10 V	PM2.5		
Supply fan control	Discrete	Open collector/dry contact	M1 (TACHO)	NC	The control feature can be configured to fan tach pulses or an external dry contact, or disabled. You can also program the number of tach pulses per fan revolution and the alarm condition detection time.
Exhaust fan control	Discrete	Open collector/dry contact	M2 (TACHO)	NC	
Supply filter contamination control	Discrete	Dry contact	FILTER (IN SU)	NO	
Extract filter contamination control	Discrete	Dry contact	FILTER (IN EXH)	NO	
Heat medium flow control	Discrete	Dry contact	L1	NC	This input is enabled/disabled via the Engineering Menu.
Heat medium pressure control	Discrete	~220 V	L2	NC	This input is enabled/disabled via the Engineering Menu.
Fire alarm sensor	Discrete	~220 V	L3	NC	This input is enabled/disabled via the Engineering Menu.
Boost switch	Discrete	~220 V	L4	NO	This input is enabled/disabled via the Engineering Menu.
Fireplace switch	Discrete	~220 V	L5	NO	This input is enabled/disabled via the Engineering Menu.
Electric preheating thermostat (alarm)	Discrete	~220 V	NKP TRIAC (IN)	NC	
Electric reheater thermostat (alarm) or water heater capillary thermostat (alarm)	Discrete	~220 V	NKD TRIAC (IN)	NC	

Controller outputs



Output purpose	Output type	Signal type	Designation	Note
Supply fan control	Analogue	0-10 V	M1 (OUT 0-10)	You can configure the minimum and the maximum value of the signal sent to an active fan and the delay before switching to automatic control after activating the unit.
Exhaust fan control	Analogue	0-10 V	M2 (OUT 0-10)	
Analogue control of the reheater or water heater valve control	Analogue	0-10 V	0-10V OUT (1)	The operation of this output depends on the heater type selected via the Engineering Menu: Electric. The system controls an external circuit board which operates the heater (e.g. multi-stage) Water. 2-10 V valve control signal.
Analogue control of the bypass	Analogue	0-10 V	0-10V OUT (2)	
Analogue control of the cooler	Analogue	0-10 V	0-10V OUT (3)	The operation of this output depends on the cooler type selected via the Engineering Menu: Discrete. Output inactive. Analogue. The output will control the built-in or external cooler with its own control circuit.
Electric preheater control	External TRIAC control		NKP TRIAC (OUT)	PWM signal is modulated to an external TRIAC with a 10 second cycle.
Electric reheater control	External TRIAC control		NKP TRIAC (OUT)	PWM signal is modulated to an external TRIAC with a 10 second cycle.
Electric preheater release	Relay	3A, =30 V/~250 V	NKP	
Electric heater release or water heater pump release	Relay	3A, =30 V/~250 V	NKD	
Supply damper actuator control and/or supply fan frequency converter release	Relay	3A, =30 V/~250 V	VALVE1	
Extract damper actuator control and/or exhaust fan frequency converter release	Relay	3A, =30 V/~250 V	VALVE2	
Discrete control of the cooler	Relay	3A, =30 V/~250 V	KKB	The operation of this output depends on the cooler type selected via the Engineering Menu: Discrete. The output will directly control the cooler. Analogue. The output will be used for cooler release. You can configure the minimum activation period and the minimum idle time before a subsequent activation.
Discrete control of the bypass or analogue control of the rotary heat exchanger	Two relay outputs	3A, =30 V/~250 V 3A, =30 V/~250 V	BPS	The operation of this output depends on the unit configuration. Discrete bypass: Opening the bypass closes the BPS relay (C - NO) and opens the BPS relay (C - NC). Closing the bypass opens the BPS relay (C - NO) and closes the BPS relay (C - NC). Rotary heat exchanger: Discrete. The output will directly control the actuator. Analogue. The output will be used for actuator release. The BPS relay (C - NO) is enabled.

Communication interfaces

RS-485	The terminal (RS-485) is energised with 24 DCV to power up to 16 external devices. The maximum current is 500 mA. Any current in excess of 500 mA triggers the overload protection to automatically restore power once the load reverts to normal.
Wi-Fi	The unit can be fitted with a 50 ohm remote antenna.

CONNECTING A MOBILE DEVICE TO THE UNIT

The fan is controlled by the **Vents Home** application on the mobile device.
The application is available for download at App Store, Play Market or via the QR code.

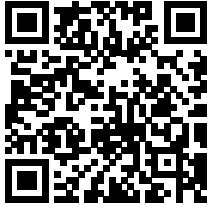Vents Home – App Store	Vents Home – Play Market
	

Wi-Fi technical data

Standard	IEEE 802,11, b/g/n
Frequency band [GHz]	2.4
Transmission power [mW] (dBm)	100(+20)
Network	DHCP
WLAN safety	WPA, WPA2

By default, the unit operates as a Wi-Fi access point. After installing the application, connect the mobile device to the unit as to a Wi-Fi access point (FAN: + 16 characters of the ID number) indicated on the control board and on the unit casing.

Wi-Fi access point password: 11111111.

SPECIAL SETUP MODE

In the event of losing the Wi-Fi password or the unit password, connecting external devices or in other cases, use the special Setup mode to restore access to the unit functions.

To enter the special **Setup mode**, press and hold the **Setup mode** button on the control panel for 5 seconds before the LED on the button starts flashing.


The location of the **Setup mode** button is specified in the unit user's manual. The unit will continue in this mode for 3 minutes and then automatically revert to the previous settings.

To exit the **Setup mode**, press and hold the button again for 5 seconds until the LED on the button stops flashing.

Settings for a special Setup mode

Wi-Fi name:	Setup mode
Wi-Fi password:	11111111 (the unit password is ignored)
Type of the Ethernet IP address:	DHCP
RS-485 address:	1
The transmission rate of the RS-485:	115200 baud
RS-485 stop bits:	2
RS-485 parity:	none
Engineering menu password:	1111

MODE PRIORITIES

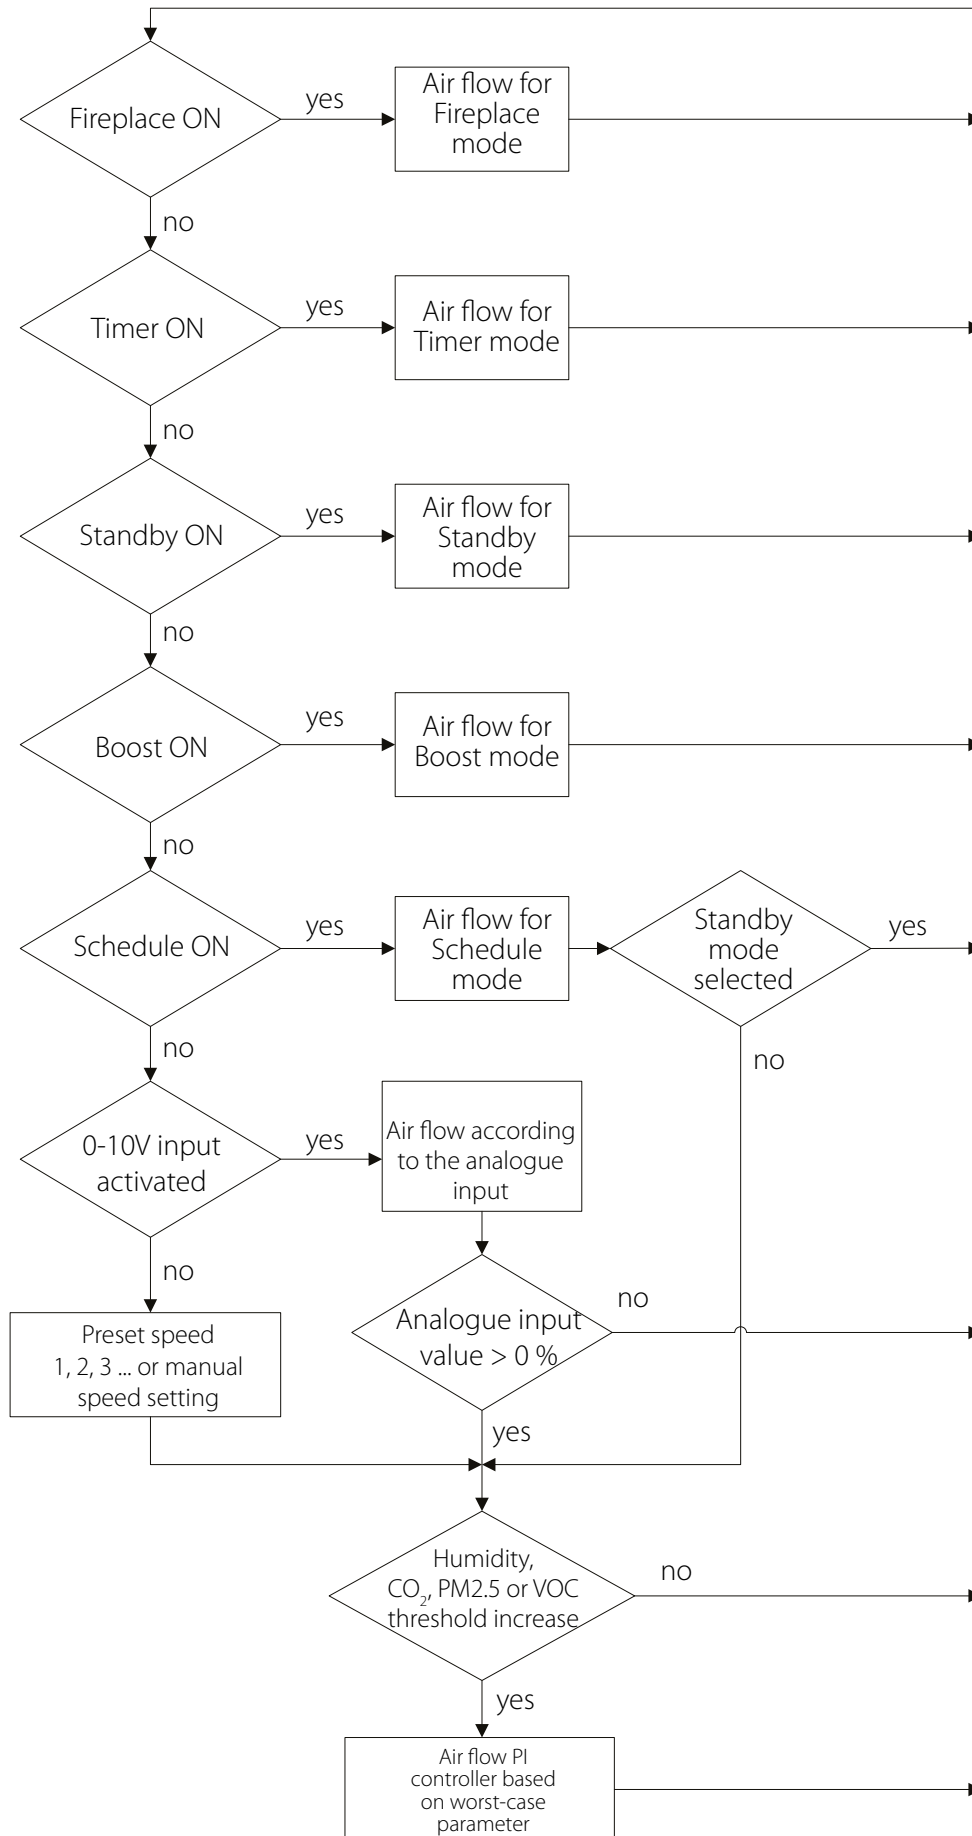

ALARM AND WARNING CODES

Code	Description
0	<p>Alarm! Supply fan malfunction.</p> <ul style="list-style-type: none"> • Determined depending on a specific configuration. • By rpm: if the supply fan speed drops below 300 rpm for 30 seconds (configurable within a 5 to 120 second range). • By discrete input: if the discrete input (TAHO M1) remains open for 30 seconds (configurable within a 5 to 120 second range) provided that the supply fan must be running.
1	<p>Alarm! Extract fan malfunction. Determined depending on a specific configuration.</p> <ul style="list-style-type: none"> • By rpm: if the extract fan speed drops below 300 rpm for 30 seconds (configurable within a 5 to 120 second range). • By discrete input: if the discrete input (TAHO M2) remains open for 30 seconds (configurable within a 5 to 120 second range) provided that the extract fan must be running.
2	<p>Alarm! No outdoor air temperature sensor detected.</p> <p>Determined if the heat exchanger freeze protection is active or the unit is configured with a bypass, a rotary heat exchanger, a cooler or a water heater.</p>
3	<p>Alarm! Short circuit of the outdoor air temperature sensor.</p> <p>Determined if the heat exchanger freeze protection is active or the unit is configured with a bypass, a rotary heat exchanger, a cooler or a water heater.</p>
4	<p>Alarm! No supply air temperature sensor detected.</p> <p>Determined in any unit configuration.</p>
5	<p>Alarm! Short circuit of the supply air temperature sensor.</p> <p>Determined in any unit configuration.</p>
6	<p>Alarm! No sensor of the extract air temperature upstream of the heat exchanger detected.</p> <p>Determined if the extract air temperature sensor is selected as the master sensor for temperature control provided that the main heater or condensing unit are enabled. The alarm will also be determined irrespective of which sensor is selected for temperature control if the bypass or rotary heat exchanger is enabled.</p>
7	<p>Alarm! Short circuit of the extract air temperature sensor.</p> <p>Determined if the extract air temperature sensor is selected as the master sensor for temperature control provided that the main heater or condensing unit are enabled. The alarm will also be determined irrespective of which sensor is selected for temperature control if the bypass or rotary heat exchanger is enabled.</p>
8	<p>Alarm! No sensor of the exhaust air temperature downstream of the heat exchanger detected.</p> <p>Determined if the heat exchanger freeze protection is active.</p>
9	<p>Alarm! Short circuit of the exhaust air temperature sensor.</p> <p>Determined if the heat exchanger freeze protection is active.</p>
10	<p>Alarm! Preheater protective thermostat activated.</p> <p>Determined if the preheater is selected for protecting the heat exchanger from freezing (NKP IN).</p>
11	<p>Alarm! Main heater protective thermostat activated.</p> <p>Determined if electric or water heater is enabled as the main heater and the discrete input (NKD IN) is open.</p>
12	<p>Alarm! Preheating cannot provide heat exchanger freezing protection.</p> <p>Determined if the preheater is selected for protecting the heat exchanger from freezing and freezing danger warning has been active for 30 minutes.</p>
13	<p>Warning! Main humidity sensor not detected.</p> <p>Determined if the main humidity sensor is activated and its signal value is 0.</p>
14	<p>Warning! Main CO₂ sensor not detected.</p> <p>Determined if the main CO₂ sensor is activated and its signal value is 0.</p>
15	<p>Warning! Main PM2.5 sensor not detected.</p> <p>Determined if the main PM2.5 sensor is activated and its signal value is 0.</p>
16	<p>Warning! Main VOC sensor not detected.</p> <p>Determined if the main VOC sensor is activated and its signal value is 0.</p>
17	<p>Warning! External humidity sensor not detected.</p> <p>Determined if the sensor has sent no feedback to the controller for 20 seconds while being active.</p>
18	<p>Warning! External CO₂ sensor not detected.</p> <p>Determined if the sensor has sent no feedback to the controller for 20 seconds while being active.</p>
19	<p>Warning! External PM2.5 sensor not detected.</p> <p>Determined if the sensor has sent no feedback to the controller for 20 seconds while being active.</p>
20.	<p>Warning! External VOC sensor not detected.</p> <p>Determined if the sensor has sent no feedback to the controller for 20 seconds while being active.</p>

21	Warning! Indoor air temperature not detected! The air temperature is controlled by using the feedback from the temperature sensor in the supply air duct downstream of the heat exchanger. Determined if no sensor data has been communicated from the control panel to the controller for 20 seconds if the sensor is selected as the temperature control master sensor provided that the main heater, the bypass, the rotary heat exchanger or the condensing unit are enabled.
22	Warning! Heat exchanger freezing danger. Determined if the supply fan is enabled, the outdoor temperature drops below -3 °C and remains below -1 °C, and the exhaust air temperature downstream of the heat exchanger drops below 2 °C and remains below 3 °C.
23	Warning! The battery is low. The weekly schedule function will work incorrectly. Determined if no battery is detected or its voltage level drops below 2 V. The battery voltage level is monitored every 5 minutes.
24	Warning! Replace the supply air filter. Determined if the pressure switch is triggered closing the discrete input (FILTER IN SU).
25	Alarm! Fire alarm activated. Determined if the fire alarm sensor is triggered opening the discrete input (L3). This alarm causes the fans to shut down immediately overriding any prior electric heater blowing commands.
26	Alarm! Low supply air temperature. Determined if the minimum supply air temperature control function is enabled (the default setpoint is +10 °C configurable within a +5 °C to +12 °C range), and the supply air temperature remains below the control setpoint for 10 minutes with the condensing unit disabled and the bypass closed.
27	Alarm! Return water temperature sensor not detected. Determined if the water heater is enabled as the main heater.
28	Alarm! Short circuit of the return water temperature sensor. Determined if the water heater is enabled as the main heater.
29	Warning! Replace the extract air filter. Determined if the pressure switch is triggered closing the discrete input (FILTER IN EXH).
30	Alarm! No water pressure detected. Determined if no water pressure is detected provided that the water heater and the water pressure sensor are enabled.
31	Alarm! No water flow detected. Determined if no water flow is detected provided that the water heater and the water flow sensor are enabled.
32	Alarm! Low return water temperature.
33	Alarm! Supply fan cannot provide heat exchanger freezing protection. Determined if the supply fan is selected for protecting the heat exchanger from freezing and the freezing danger warning has been active for 30 minutes.
34	Alarm! Bypass cannot provide heat exchanger freezing protection. Determined if the bypass is selected for protecting the heat exchanger from freezing and the freezing danger warning has been active for 30 minutes.
35	Warning! Freeze protection disabled. This may cause heat exchanger freezing! Determined if the rotary heat exchanger is not enabled and the freeze protection is deactivated.
36	Warning! The main heater is operated in the manual mode.
37	Warning! The cooler is operated in the manual mode.
38	Warning! The bypass is operated in the manual mode.
39	Warning! The rotary heat exchanger is operated in manual mode.
40	Warning! The filter timer countdown is completed. Please, replace the filter.
41	Warning! Incorrect operation of the rotary heat exchanger.
42	Warning! Preheater is operated in the manual mode.
43	Alarm! Return water temperature failed to reach setpoint in due time before AHU start.
44	Warning! The selected type of freeze protection of the heat exchanger by means of the bypass is replaced by freeze protection by means of the supply fan as the main heater operation is not allowed.
45	Warning! The fireplace mode is locked. This mode is not compatible with the selected type of freeze protection of the heat exchanger.



VENTS

